

 
BONDURANT EXTRON PANEL

GETTING STARTED

If the touch screen is blank, touch the screen to wake it up. Touch **Press Here To Begin** to get to the main screen, shown on the right. The projector should turn on.

From the main screen, select your **SOURCE DEVICE** using the icons on the top of the screen.

The **VOLUME CONTROL** is on the right side of the screen. This control adjusts the volume for the content (whatever is being projected).

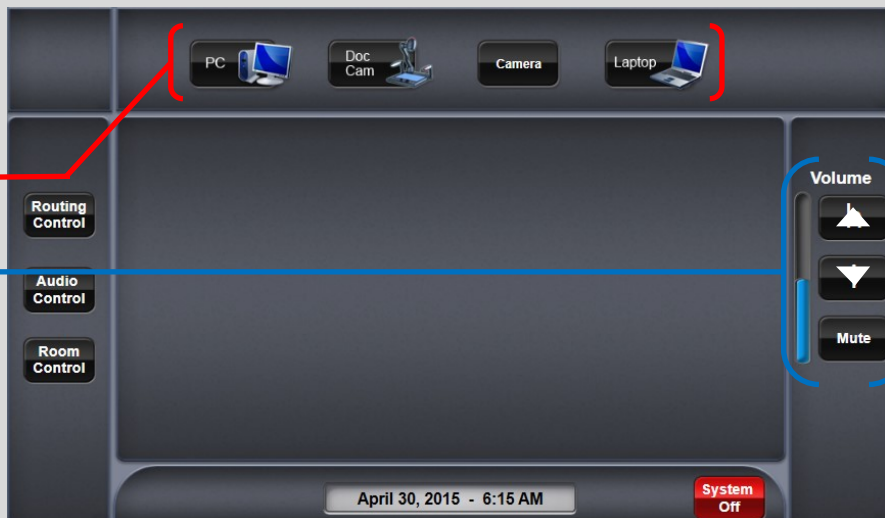

POWERPOINT PRESENTER VIEW

 
This room enables users to view notes made for PowerPoint Presenter view.

1. Go to the Desktop, and click **Extend Screen** at the right of the screen.
2. Open your presentation in PowerPoint.
3. On the **Slideshow** tab, make sure that **Use Presenter View** is selected.

Extend Screen


Screen extends from monitor to projector.

Required for PowerPoint Presenter View.

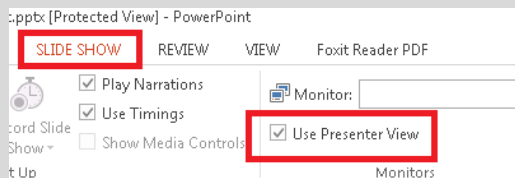


DOCUMENT CAMERA

 The document camera is located on the right of the podium. To use the camera, press the power button on the camera, and select **Doc Cam** on the touch screen.

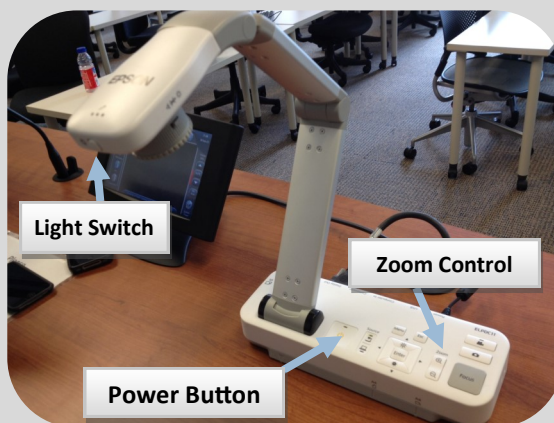

SHUTTING DOWN

 PLEASE shut down the system by pressing the **System Off** button at the bottom right of the touchscreen.



FREQUENTLY ASKED QUESTIONS

Where is the microphone?

The microphone will either be on the podium, or in the drawer coming out of the right side of the podium.

Do I turn off the projector when I'm done?

Yes. Please press the **System Off** button on the touch panel to shut down the projector.

Can you please help me???

Contact our classroom support help desk using the intercom at the podium.

GUIDES AND RESOURCES FOR OIS CLASSROOMS CAN BE FOUND ON OUR WEBSITE AT <http://go.unc.edu/CHMEDHelp> .