A/V System Quick Reference Guide

AMX Touch Panels

UNC SCHOOL OF MEDICINE
OFFICE OF INFORMATION SYSTEMS
CLASSROOM SERVICES

Getting Started

If the touch screen is blank, touch the screen to wake it up. Press **Start The System** to get to the main screen, shown on the right.

From the main screen, select your **SOURCE DEVICE** using the icons on the left of the screen. This should also turn the projector on if it is off.

The **VOLUME CONTROLS** are on the right side of the screen. The left control adjusts sound coming from the source device. The right control adjusts sound coming from the microphones.

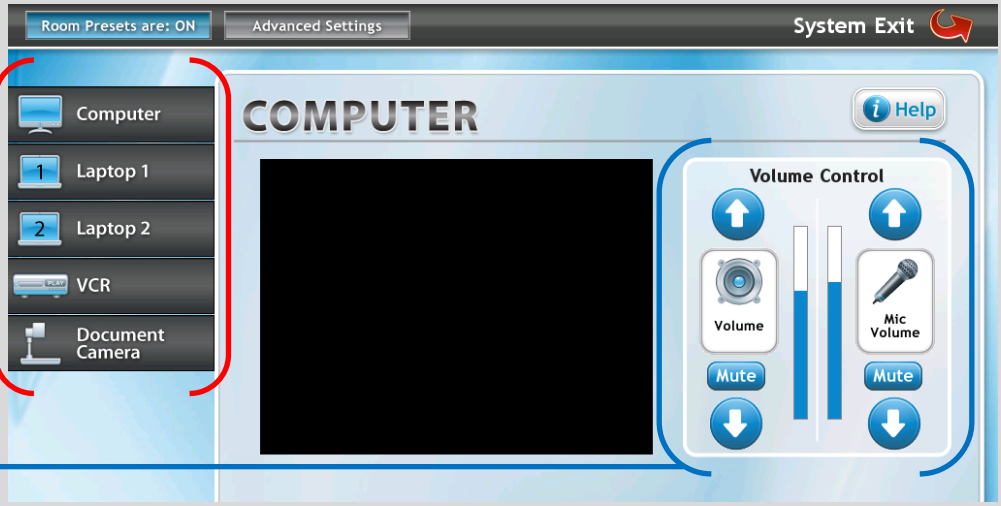

Bondurant G100 Special Case

There are two projectors in this room. To display a source device, select it on the left followed by the destination device at the bottom of the screen.

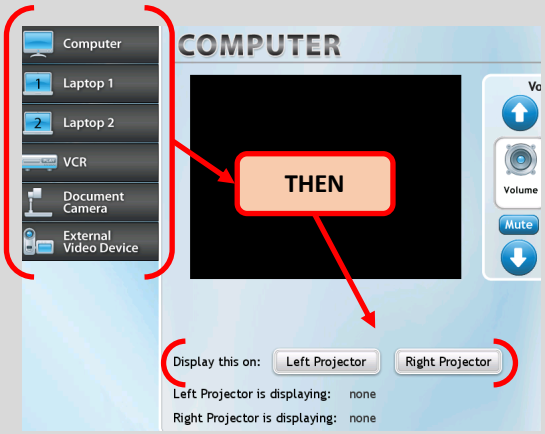

Document Camera

The document camera is stored in a drawer on the right side of the podium. If using the preset source button on the touchscreen does nothing, make sure the camera is turned on by using the Power switch near the ELMO logo on the document camera.

For more information, you can view a short instructional video on our website at http://go.unc.edu/Yc85A.

Shutting Down

PLEASE shut down the system by pressing the System Exit button at the top right of the touchscreen.

Frequently Asked Questions

Where is the microphone?

In most rooms, if not on the podium, check the drawer beneath the computer at the podium.

Do I turn off the projector when I'm done?

*Yes. Please press the **System Exit** button on the touch panel to shut down the projector.*

Can you please help me???

Contact our classroom support help desk using the intercom at the podium.

Guides and resources for OIS Classrooms can be found on our website at http://go.unc.edu/w7HTm .